



WALL REGISTER INSTALLATION

BEFORE INSTALLING

Before you begin, read the installation instructions below. Observe all local building and safety codes.

INSTRUCTIONS

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Relations at 1.866.855.2284. If you need assistance or have questions while installing your wall register, contact Customer Relations.

We recommend consulting a professional if you are unfamiliar with installing hardware. Signature Hardware accepts no liability for any damage to the wall, or for personal injury during installation.


TOOLS AND MATERIALS:




Screwdriver

SPRING CLIP INSTALLATION

1. Remove four screws from the new wall register, as shown. Do not discard the screws.

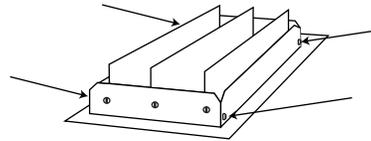

2. Using the removed screws, attach the spring clips to the register as shown.

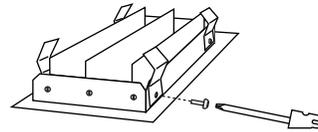

Note: The mounting points for spring clips may be on the long or short side of your register depending on the style of register.

INSTALLATION

1. Remove the old wall register. If the existing register is screwed to the wall, use a screwdriver to remove the screws that hold the register in place.

2. Insert the new wall register. The louver frame will fit into the air duct opening, while the lip of the register will sit flush against the wall surface. If your register came with tension spring clips, attach them to the register before inserting (see below). The clips will snap into place once the register is pressed into the duct. If your register came with mounting screws, use them to secure the register to the wall.

