RIM LOCK SET

BEFORE INSTALLING

Read the following installation and care instructions.Observe all local plumbing, building, and electrical codes. Install your tub on an adequately supported and level finished floor.

INSTRUCTIONS

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1.866.855.2284. If you need assistance or have questions while installing your lock set contact Customer Service.

We recommend consulting a professional if you are unfamiliar with installing hardware fixtures. Signature Hardware accepts no liability for any damage to the door or door frame, or for personal injury during installation.



IMPORTANT INFORMATION

These locks are not designed for security. They should not be used on exterior doors unless they are supplemented by an auxiliary deadbolt or other device.

INSTALLATION

1. Mark the position of the lock set on the inside of the door. Decide where you will place the lock set on your door. Hold the larger piece of the lock body against the inside of the door at the desired location and lightly trace around it with a pencil. Mark the location of the holes for the fasteners. Then hold the smaller piece of the lock body in corresponding position on the door frame or wall and mark the holes with a pencil.

2. **Measure the location of the spindle and the keyhole.** Transfer these measurements to the door, and mark their locations with a pencil.

3. **Drill a hole to accommodate the spindle.** The hole should be large enough to allow the spindle to turn freely.

4. Use a drill and chisel to create a keyhole in the door. Drill a hole at the top and bottom of the keyhole you marked in Step 2. Use a chisel to remove any wood between the two holes.

Note: The key has to be able to pass through the entire door to reach the lock body, so test your key to make sure it fits before proceeding.

5. Install the lock body on the door and door frame. Drill pilot holes, if needed, for the fasteners. Use the provided fasteners to secure the larger part of the lock body to the door and the smaller part to the frame or wall. If your rim lock set does not include fasteners, you can use modern nails or screws, or find antique fasteners to compliment your lock.



customer service: 1.866.855.2284 signature**hardware**.com

INSTALLATION

6. Attach the door knobs. Separate the door knobs and spindle, if they are assembled in the package. Insert the spindle through the hole on the lock body. If your lock set includes an escutcheon, fasten it to the door with wood screws. Connect the knobs to the spindle on each side of the door. Some old knob sets click together using an integral connector in the spindle. Other knob sets have a hole in the base of the knob where a set screw can be installed. If your knob set screw, holding the knob in place.

7. **Install the rosette.** The rosette is a decorative metal plate that gives the rim lock keyhole a finished look. Place the rosette on the keyhole on the outside of the door and use wood screws or nails to fasten it to the door.

8. **Test the rim lock set.** Test the rim lock by closing the door and engaging the rim lock with the keys. Make the necessary adjustments on the position of the strike plate if the bolt latch disengages when nudged.



customer service: 1.866.855.2284 signature**hardware**.com