



## STAINLESS STEEL EXPOSED OUTDOOR SHOWER

### INSTALLATION INSTRUCTIONS

Before installing, read entire Outdoor Shower Installation Instructions. Observe all local building and safety codes.

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1.866.855.2284. If you need assistance or have questions while installing your Outdoor Shower, contact Customer Service.

Because wall construction and materials vary from home to home, Signature Hardware does not provide mounting hardware for all of our outdoor products. The appropriate mounting hardware can be purchased from your local hardware store.

We recommend consulting a professional if you are unfamiliar with installing outdoor and plumbing fixtures. Signature Hardware accepts no liability for any damage to the shower, installation surface, or for personal injury during installation.

**Note:** Make sure to winterize your outdoor shower before cold weather arrives to prevent burst pipes and protect the shower's hardware.

### TOOLS AND MATERIALS:

Pencil

Drill

Air Compressor

### INSTALLATION

1. Loosen the set screw on the wall support loop with the Allen wrench provided. Slide the loop up the riser to the appropriate location and re-tighten the set screw to secure.
2. Thread the wall flange onto the wall support loop.
3. Place the decorative escutcheon on the handle valve and thread the valve directly onto the water supply line.
4. Slide the riser nut up the shower riser.
5. Insert the bottom of the riser into the handle valve. Slide the riser nut back down and tighten.
6. Mark the location of the mounting holes in the wall support flange and attach the shower to the mounting surface with the appropriate mounting hardware.
7. Attach the shower head.
8. Turn on the water supply to check for leaks. Let the water flow through the shower head for approximately 30 seconds to clear out debris and dirt. If leakage occurs, contact Customer Service at 1-866-855-2284.

REVISED 07/10/2019




## STAINLESS STEEL EXPOSED OUTDOOR SHOWER

### WINTERIZING

1. Locate the shutoff valves for the outdoor shower unit. Turn off the shower's water supply.
2. Disconnect the supply lines from the back of the shower unit using the adjustable wrench.
3. Remove the shower head if possible.
4. Open the valve to the HOT position.

5. Insert the air blower from the air compressor into the HOT inlet hose. Blow compressed air into the hose until no more water comes out of the shower head.


**NOTE:** The hoses may differ from your installation.

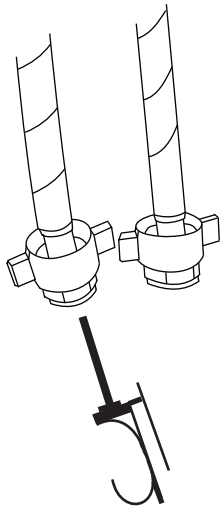

6. Open the valve to the COLD position.

7. Insert the air blower from the air compressor into the COLD inlet hose. Blow compressed air into the hose until no more water comes out of the shower head.

**NOTE:** The hoses may differ from your installation.

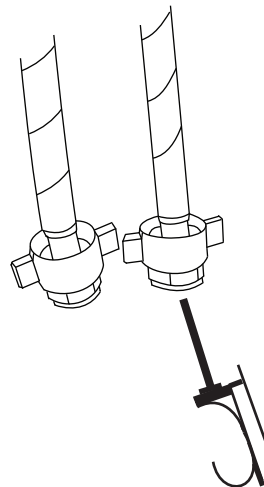

8. As a final check, place the temperature selector in the middle range.

9. Insert the air blower tool from the air compressor into the COLD inlet hose as shown in Step 5. Blow compressed air into the hose until no more water comes out of the shower head. Repeat for the HOT inlet hose.

When no more water comes out of the shower head, winterizing is complete.

10. Replace shower head if previously removed.