



# STAINLESS STEEL DROP-IN SINK

## BEFORE INSTALLING

Read entire Drop-In Sink Installation Instructions. Observe all local building and safety codes.

## INSTRUCTIONS

For this installation it is assumed that the countertop has been cut to the dimensions of the sink. We recommend consulting a professional if you are unfamiliar with this type of installation, Signature Hardware accepts no liability for any damages to the floor, walls, plumbing or for personal injury during installation.

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1-855-715-1800. If you need assistance or have questions while installing your sink, contact Customer Service.

## TOOLS AND MATERIALS:



Level



Silicone Sealant



Damp Cloth



Basin Wrench



Thread Sealant

## MATERIAL DESCRIPTION AND CARE

Stainless steel sinks are handcrafted from heavy gauge stainless steel, which is extremely durable, but can be scratched or scuffed when not cared for properly.

To maintain the condition of your stainless steel sink, simply clean daily with mild soap and warm water and wipe the entire surface dry with a dry, clean, soft cloth after each use. Keep sink free of any standing water to prevent the buildup of mineral deposits that can affect the appearance of your sink. Because iron particles often develop rust spots in stainless steel surfaces, do not leave steel cookware or utensils on the surface of the sink for long periods of time.

Do not use cleaners containing acids, harsh chemicals, or abrasives. Use the Stainless Steel Scratch-B-Gone Kit to remove minor scratches and maintain the beauty of your stainless steel fixture.

## INSTALLATION

1. Lower the sink into the sink cutout on the counter to confirm the sink will fit properly. The perimeter of the sink rim should connect with the counter while the sink bowl should sit completely inside the counter.

**Tip:** For easier installation, install the drain and faucet before attaching the sink to the counter.

2. Remove the sink and run a bead of silicone sealant around the sink cutout to seal the rim against moisture and leaks.

3. Carefully lower the sink back into the cutout and press the sink firmly into the sealant. Make sure that the sink is level and properly aligned.

4. With the sink in place, tighten the mounting clips (if included) on the underside of the sink.

5. Wipe away any excess sealant around the rim of the sink with a damp cloth.