TOILET PAPER HOLDER

BEFORE INSTALLING

Read entire Toilet Paper Holder Installation Instructions. Observe all local building and safety codes.

INSTRUCTIONS

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1-855-715-1800. If you need assistance or have questions while installing your toilet paper holder, contact Customer Service.

We recommend anchoring any fixtures that will bear weight to wall studs or solid wood blocking. If the studs in your bathroom do not line up to the mounting location for your toilet paper holder, wood blocking can be installed between the studs using standard 2 x 4's. If wood blocking needs to be installed behind the finished wall, we recommend consulting a professional if you are unfamiliar with this type of installation.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Signature Hardware accepts no liability for any damage to the floor, walls or for personal injury during installation.

TOOLS AND MATERIALS:



INSTALLATION

1. If the mounting brackets and toilet paper holder arrive assembled, disassemble by removing the set screws with the Allen wrench (provided) or a screwdriver.

2. Determine the installation location and mark the wall through each of the mounting holes in the mounting brackets. This location may vary -- for standard installation we recommend installing your toilet paper holder approximately 26" above the finished floor and 8"-12" in front of toilet.

3. Drill the screw holes with the appropriate drill bit for the wall surface or material.

4. Attach the mounting brackets to the wall with the mounting hardware. Use your level and tape measure to ensure your brackets are perfectly straight and in the proper position.

5. Attach the toilet paper holder to the mounting brackets. The set screws should be on the underside of the toilet paper holder.

6. Secure by tightening the set screws with your Allen wrench (provided) or screwdriver.

customer service: 1.855.715.1800 signature**hardware**.com