

BATHRUB FUACET

SKU: 908019, 908190, 908215, 908204, 908419, 908420, 908421, 909071, 909072, 909073, 909074, 909075  
925478, 940859

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the faucet, plumbing, bathtub, floor, or for personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the faucet for shipping damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

GETTING STARTED


- Ensure that you have gathered all the required materials that are needed for the installation.
- For these instructions, it is assumed that the old faucet has been completely removed and any necessary repairs or modifications to the water supply have been completed.

TABLE OF CONTENTS


This faucet is available in multiple installation configurations. Proceed to the page relative to your installation type.

Deck-Mount Installation.....	Page 2
Inner Tub Wall Installation.....	Page 3
Bathroom Wall Installation.....	Page 3
Final Assembly.....	Page 4


TOOLS AND MATERIALS:




Plumbers  
Tape




Thread  
Sealant



Phillips  
Screwdriver



Adjustable  
Wrench



Basin Wrench

REVISED 06/08/2020  
CODES: 514918, 114317, 477886, 514916  
109097, 197129, 514921, 514919, 515201  
515200, 515202, 514915, 456926, 456924  
456925, 329451, 329449, 329450, 195762  
195761, 195763, 114307, 215574, 329262  
114306, 144410, 329259, 457961, 457960  
339563

For Warranty information, please visit: [signaturehardware.com/services/warranty](http://signaturehardware.com/services/warranty)


## BATHRUB FAUCET

SKU: 908019, 908190, 908215, 908204, 908419, 908420, 908421, 909071, 909072, 909073, 909074, 909075  
925478, 940859


### STEP 1: FAUCET MOUNTING

#### DECK-MOUNT INSTALLATION

1A. Attach the provided threaded shanks into the base of each deck coupler, as shown. Apply thread sealant or plumber's tape to the threads before attaching. Tighten firmly.

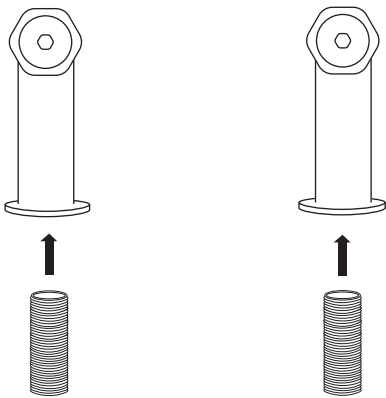


2A. Insert each of the deck couplers into their prepared mounting holes. From underneath, slide the metal washer onto each threaded shank, followed by the lock nut. Thread the lock nut onto the shank until hand-tight. Do not fully tighten yet.

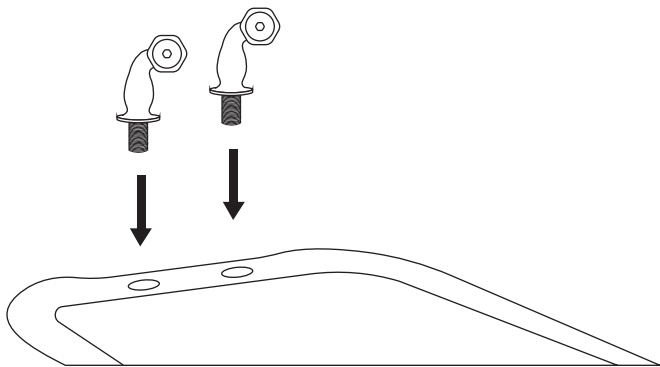

3A. Attach the faucet body to the installed deck couplers. Apply thread sealant or plumber's tape to the threads before tightening. Tighten firmly using an adjustable wrench, then finish tightening the lock nuts, securing the faucet to the deck.

**Tip:** Wrap the nuts with a soft cloth before using an adjustable wrench to tighten, to avoid scratching the decorative finish.

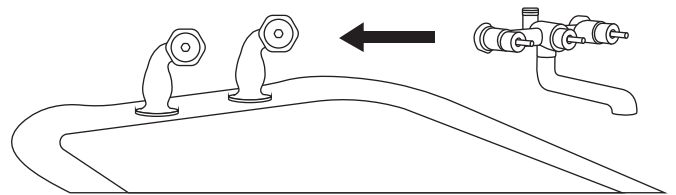

**PROCEED TO STEP 2 ON PAGE 5 FOR FINAL ASSEMBLY INSTRUCTIONS.**


## BATHRUB FUACET

SKU: 908019, 908190, 908215, 908204, 908419, 908420, 908421, 909071, 909072, 909073, 909074, 909075  
925478, 940859


### INNER TUB WALL INSTALLATION

1B. Attach the wall-mount couplers to the back of the faucet body. Apply plumber's tape or thread sealant to the threads before attaching. Tighten firmly using an adjustable wrench.

**Tip:** Wrap the nuts with a soft cloth before using an adjustable wrench to tighten, to avoid scratching the decorative finish.

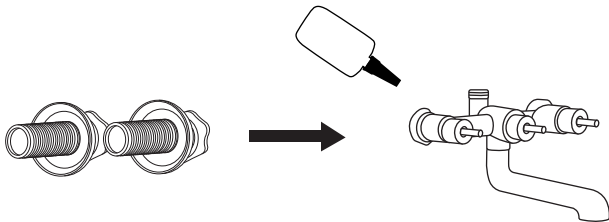


2B. Insert the faucet into its prepared mounting holes. From behind, thread the lock nuts onto the threaded shanks to secure the faucet to the tub.

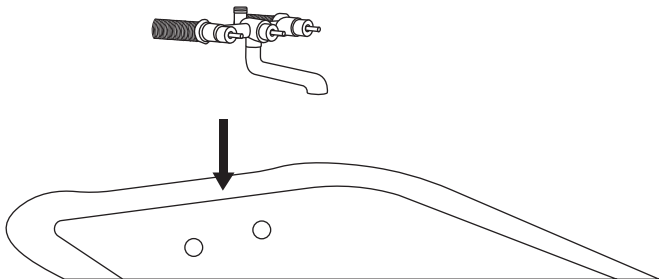

**PROCEED TO STEP 2 ON PAGE 5 FOR FINAL ASSEMBLY INSTRUCTIONS.**


### BATHROOM WALL INSTALLATION

1C. Before faucet installation, two 1/2" pipe nipples should be installed into the wall as part of rough-in procedures. The pipe nipple should extend approximately 1/2" beyond the finished wall to make the connection to the faucet.

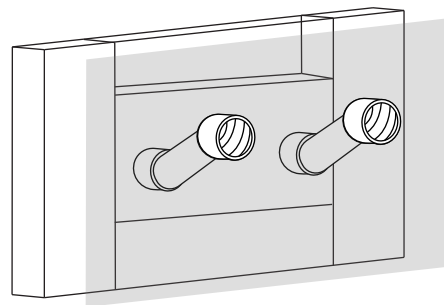

2C. Apply plumber's tape or thread sealant to the exposed threads of the pipe nipples installed in the wall. Attach the provided wall mount couplers to the pipe nipple. Tighten firmly using an adjustable wrench.

**Tip:** Wrap the nuts with a soft cloth before using an adjustable wrench to tighten, to avoid scratching the decorative finish.

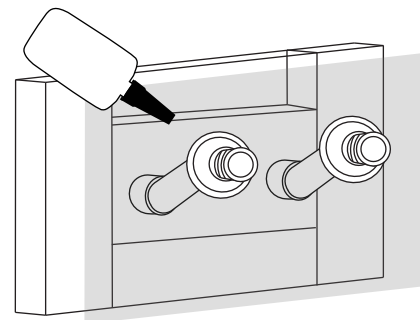


# MODERN

## BATHRUB FUACET


SKU: 908019, 908190, 908215, 908204, 908419, 908420, 908421, 909071, 909072, 909073, 909074, 909075  
925478, 940859

3D. Apply plumber's tape or thread sealant to the threaded outlets on the back of the faucet body. Attach the faucet body to the installed wall mount couplers. Tighten the lock nut firmly using an adjustable wrench.

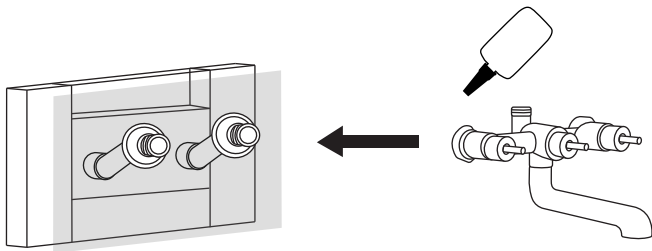


**PROCEED TO STEP 2 ON PAGE 5 FOR FINAL  
ASSEMBLY INSTRUCTIONS.**

1. Attach the hand shower cradle to the outlet on the top of the faucet body. Ensure that the rubber washer is inserted into the base of the cradle before attaching. Tighten firmly using an adjustable wrench.

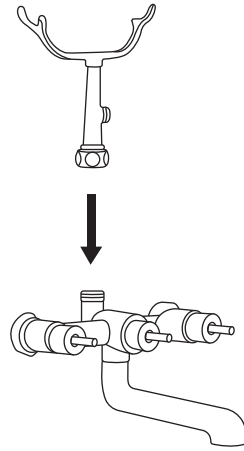

2. Attach the hand shower head to the hand shower handle. Hand tighten firmly.

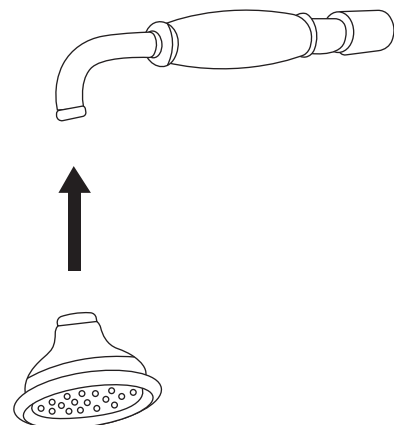


# MODERN


## BATHRUB FUACET

SKU: 908019, 908190, 908215, 908204, 908419, 908420, 908421, 909071, 909072, 909073, 909074, 909075  
925478, 940859

3. Using the provided flexible hose, attach the hand shower to its outlet on the hand shower cradle. Insert one of the provided rubber washers into each end of the hose before attaching. Tighten firmly.

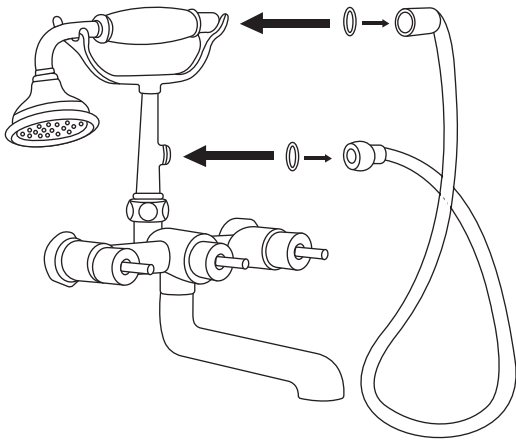

4. To attach the faucet handles, slide each handle onto its stem. Secure the handles by tightening the set screws located on the bottom of each handle, using the provided hex wrench.

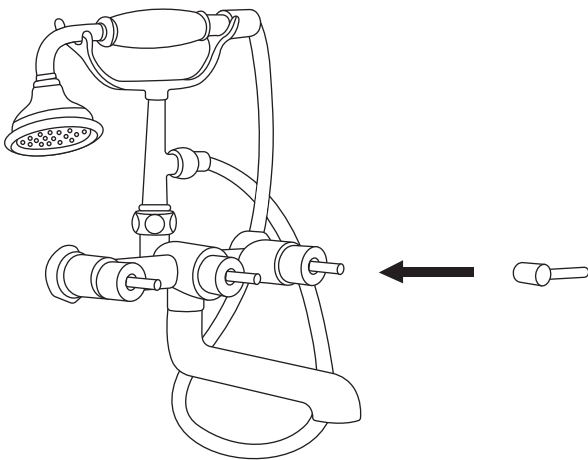

5. Once installation is complete, turn the faucet on for appoximately 60 seconds to check for any leaks, and to ensure that hot and cold water are running appropriately. Divert water flow to the hand shower for testing as well.

