



COOPER DOUBLE ROBE HOOK INSTALLATION

BEFORE INSTALLING

We recommend consulting a professional if you are unfamiliar with installing this type of product. Signature Hardware accepts no liability for any damage to the home, product, or for personal injury during installation.

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Relations at 1.855.715.1800.

Observe all local plumbing and building codes.

TOOLS AND MATERIALS:



Drill

Phillips
Screwdriver

Hex Wrench




Drill Bit



Level

INSTALLATION

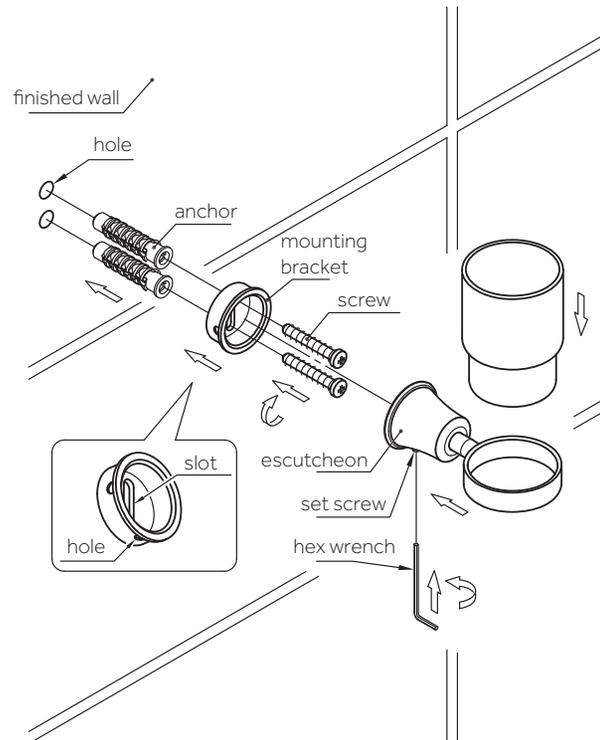

* The above installation diagram is only for reference. While the design may be different than the actual item, the installation procedure is the same.

1. Determine a location to mount the robe hook.
2. Hold the mounting bracket against the wall at the desired location. Make two marks in the slot of the bracket, as the bracket will require two screws.
3. Set all hardware aside. Drill a pilot hole into the wall at each marked mounting hole location.

Important: If drilling through tile, you must use a masonry drill bit to avoid cracking the tile.

4. Insert one of the provided anchors into each of the drilled holes.
5. Fasten the mounting bracket to the wall using the provided screws.
6. Install the robe hook onto the mounting bracket. Fasten the robe hook to the bracket by tightening the set screw underneath using the provided hex wrench.