



COOPER EURO TOILET PAPER HOLDER INSTALLATION

BEFORE INSTALLING

We recommend consulting a professional if you are unfamiliar with installing this type of product. Signature Hardware accepts no liability for any damage to the home, product, or for personal injury during installation.

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Relations at 1.855.715.1800.

Observe all local plumbing and building codes.

TOOLS AND MATERIALS:



Drill

Phillips
Screwdriver

Hex Wrench



Drill Bit



Level

INSTALLATION

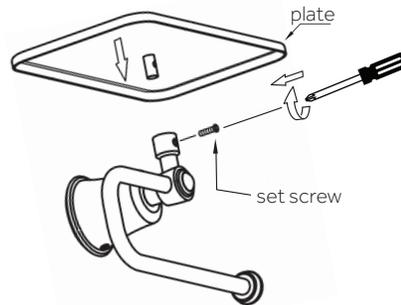


Figure 1

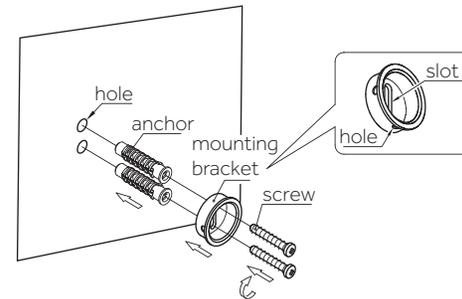


Figure 2

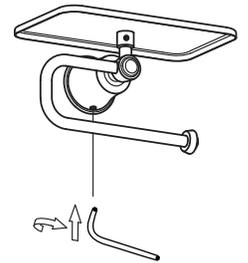


Figure 3

1. Attach the plate to the toilet paper holder. Tighten the set screw to secure, as shown (Figure 1). Note that the mounting screw needs to first be removed from the plate, then reused to attach the toilet paper holder.

2. Hold the mounting bracket against the wall at the desired location. Make two marks in the slot of the bracket, as the bracket will require two screws. Set all hardware aside.

3. Drill a pilot hole into the wall at each marked mounting hole location (Figure 2).

Important: If drilling through tile, you must use a masonry drill bit to avoid cracking the tile.

4. Insert one of the provided anchors into each of the drilled holes (Figure 2).

5. Fasten the mounting bracket to the wall using the provided screws (Figure 2).

6. Attach the toilet paper holder to the installed mounting bracket. Tighten the set screw on the bottom of the escutcheon to secure, as shown (Figure 3).