


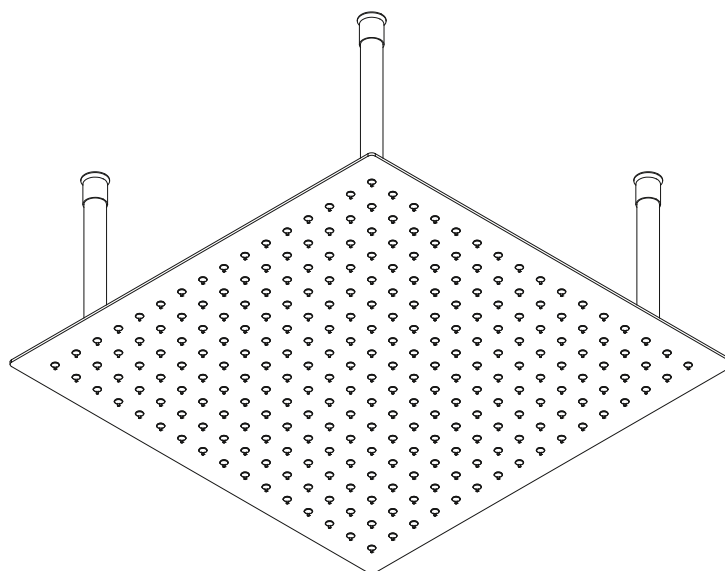

# OVERSIZED RAINFALL SHOWER



## BEFORE INSTALLING

Read the installation instructions. Observe all local plumbing and building codes.

For the following installation instructions for your new shower head it is assumed that any old fixtures have been removed and all rough-in work has been completed.

---

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1.866.855.2284. If you need assistance or have questions while installing your shower head contact Customer Service.

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures or plumbing. Signature Hardware accepts no liability for any damage to the ceiling or wall, or for personal injury during installation.

## TOOLS AND MATERIALS:



Screwdriver



Marker










Plumbers Tape



Drill

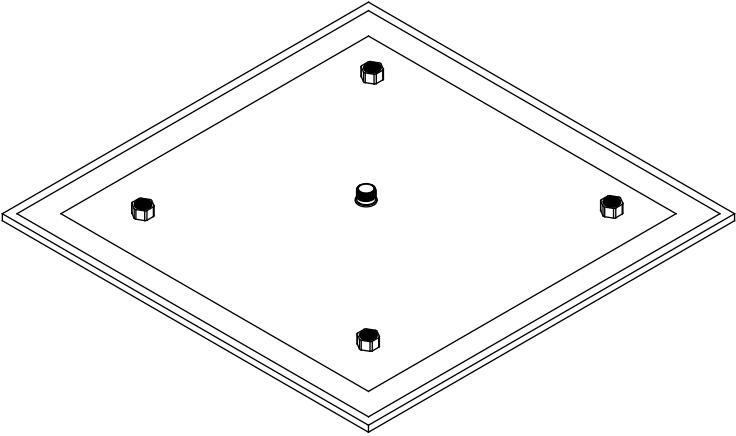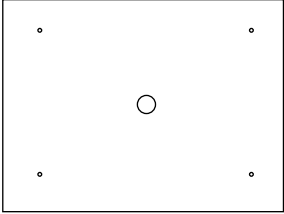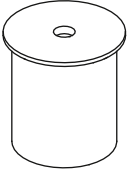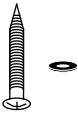


**PARTS LIST**

<b>A x 1</b> 	<b>B x 1</b> 
	<b>C x 4</b> 
	<b>D1 x 4</b> 
	<b>D2 x 4</b> 
<b>E x 4</b> 	<b>F x 1</b> 




## INSTALLATION

According to the template (B) mark the location of the mounting holes ①. Use a drill with a Ø6mm bit to drill mounting holes into studs or blocking.

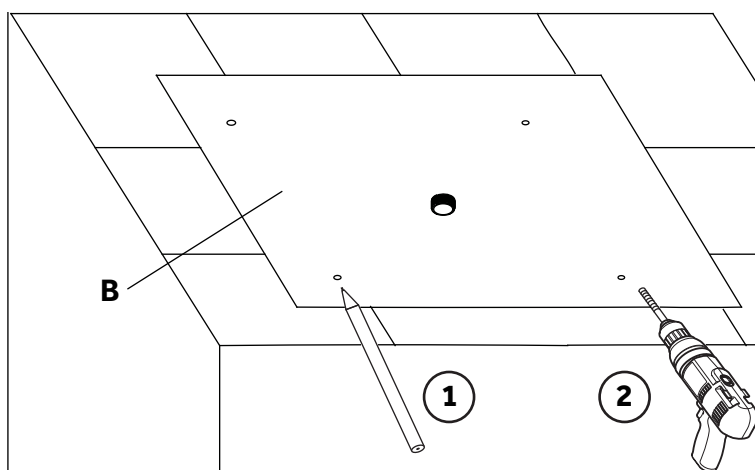


Install the mounting brackets (C) with the tapping screws (D1). Thread the shower bars (E) onto the mounting brackets, and the inlet hose (F) onto the water inlet.

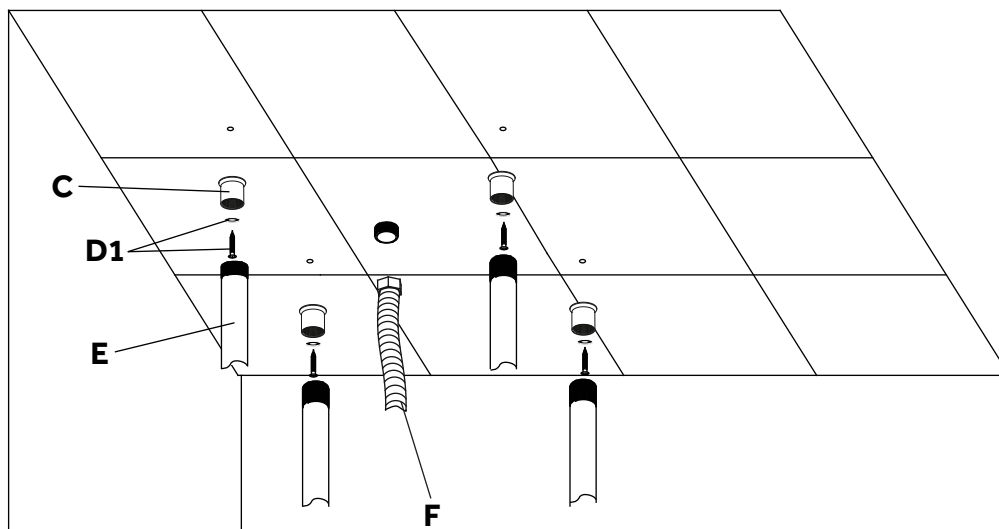



Attach the shower head (A) to the shower bars (E). Connect the inlet hose (F) to the shower head.

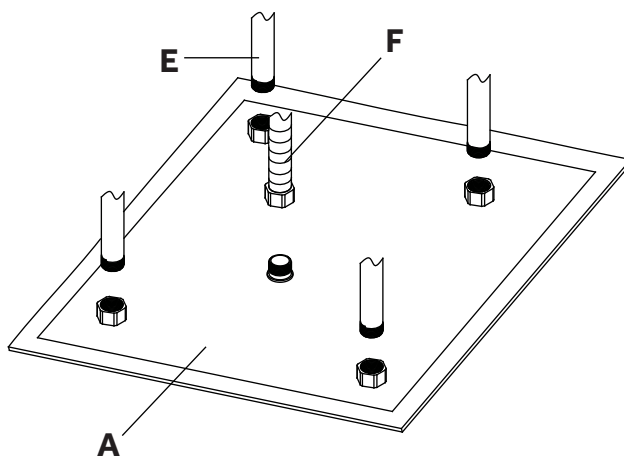

The installation is complete.

