



PONCIA SINGLE HOLE FAUCET

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the faucet, plumbing, sink, counter top, or personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the item for damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

TOOLS AND MATERIALS:



Plumber's Tape*



Phillips
Screwdriver*



Thread Sealant*



Adjustable
Wrench*



Hex Wrench




Pencil

GETTING STARTED


- Ensure that you have gathered all of the required materials that are needed for the installation.
- For these instructions, it is assumed that the old faucet has been completely removed and any necessary repairs or modifications to the water supply have been completed.

INSTALLATION

1. Ensure that the main water supply is shut off before you begin.

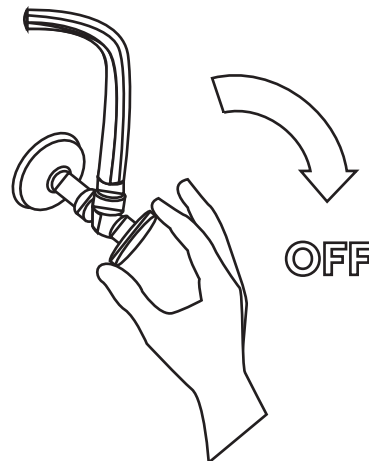


2. A 1/2" pipe nipple will need to be installed into the wall to connect the pot filler. The nipple will need to protrude no more than 1/2" from the finished wall.

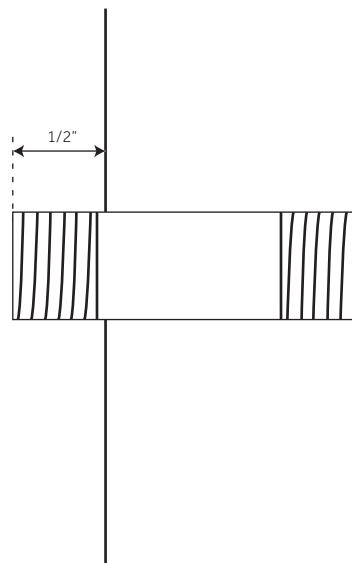




PONCIA SINGLE HOLE FAUCET


3. Temporarily attach the water supply bracket to the ½" pipe nipple until hand tight. Once tight against the wall, use a pencil to mark the location of the three mounting holes on the wall.

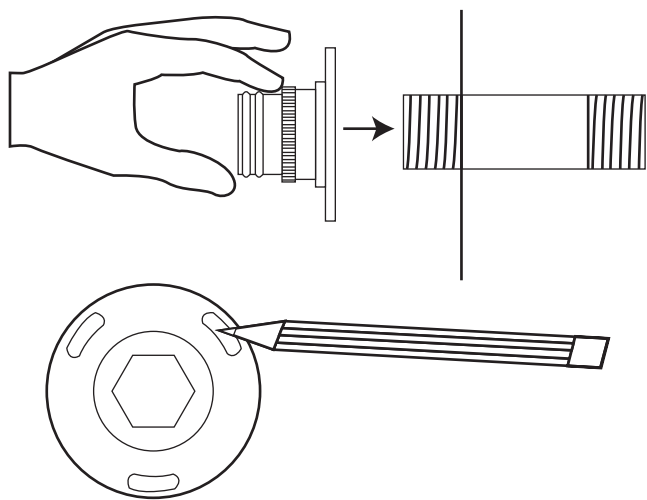

4. Remove the water supply bracket and drill pilot holes into the wall at the three marked mounting hole locations. Insert the provided anchors into the drilled holes.

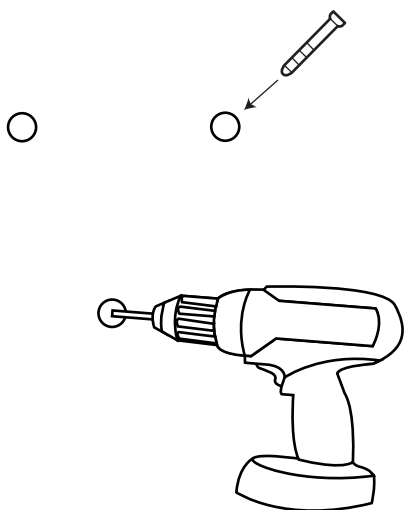


5. Reattach the water supply bracket by threading it onto the ½" pipe nipple. Apply thread sealant or plumber's tape to the threads on the nipple before attaching. Finish securing the supply bracket using the provided mounting screws. Ensure that the screws are being tightened into the installed anchors.

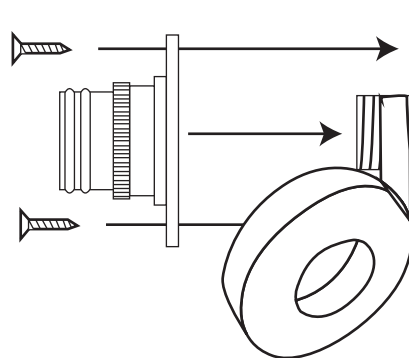

6. Slide the decorative escutcheon onto the base of the pot filler, where it will meet the wall.


Tip: It may be necessary to remove the set screw on the base of the pot filler to allow the escutcheon to pass.

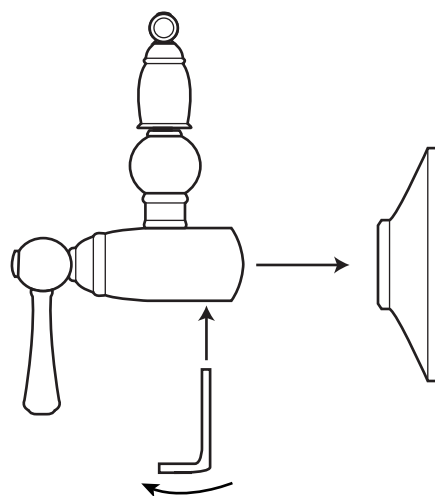




PONCIA SINGLE HOLE FAUCET

7. Attach the pot filler by pushing it onto the mounted water supply bracket. Secure it to the wall by tightening the set screw on the bottom of the base. Slide the decorative escutcheon against the wall to disguise the bracket.

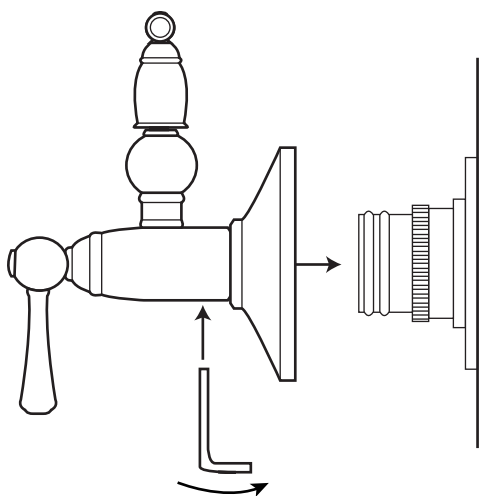

8. Once installation is complete, turn the main water supply back on.

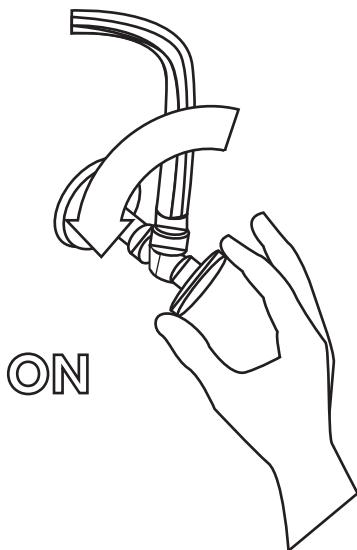

9. Remove the aerator from the spout using the provided removal tool. Turn the pot filler on and allow the water to flow for approximately 60 seconds to remove any dust or loose sediment from the water line. Check for any leaks. Once testing is complete, turn the pot filler off and reattach the aerator.

