



## ADAMS KITCHEN FAUCET INSTALLATION

#### **BEFORE YOU BEGIN**

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the faucet, plumbing, sink, counter top, or for personal injury during installation.


Observe all local plumbing and building codes.

Unpack and inspect the faucet for shipping damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

#### **GETTING STARTED**

- Ensure that you have gathered all the required materials that are needed for the installation.
- For these instructions, it is assumed that the old faucet has been completely removed and any necessary repairs or modifications to the water supply have been completed.

### **TOOLS AND MATERIALS:**

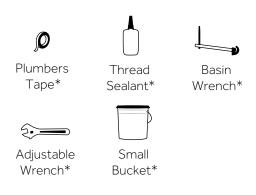

\*not included




## ADAMS KITCHEN FAUCET INSTALLATION


### **INSTALLATION**

1. Ensure that the water supply below your sink is completely shut off by turning the shutoff valves all the way to the right.


**Tip**: Place a small bucket below your workspace to catch any water that may drip during the installation process.

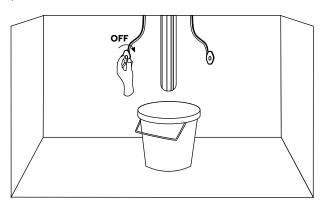


2. Remove the lock nut, rubber washer, and metal washer from the faucet body.

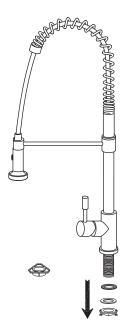

3. Attach the flexible water lines to the base of the faucet. Apply thread sealant or plumber's tape to the threads before attaching. Insert the faucet into its prepared mounting hole.




4. From beneath the sink, slide the rubber washer and metal washer back onto the faucet body. Thread the lock nut back onto the shank and tighten firmly using a basin wrench. For thin mounting surfaces, use the provided plastic support. The support should slide on second, following the rubber washer.

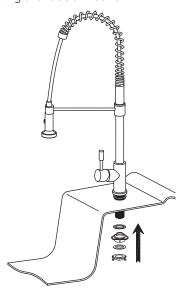




# ADAMS KITCHEN FAUCET INSTALLATION

5. Apply plumber's tape or thread sealant to the threading on each of the faucet's water lines, and connect the main water hoses to the faucet. Ensure that you are connecting the hot and cold lines appropriately.

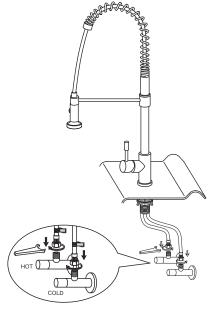

6. Once installation is complete, turn the main water supply back on from underneath your sink. Check for any leaks underneath.

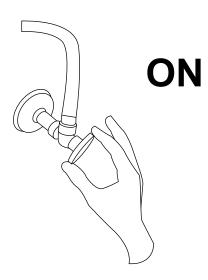

7. Remove the sprayer from the spout. Turn the faucet on and allow the water to flow for approximately 60 seconds. Ensure that there are no leaks, and that both hot and cold water are running properly. Reattach the sprayer.

